

How to  
**Re|LOVE**

FEAST **W**ATSON®  
— ESTD 1922 —



*Update your dated  
timber panel wall with  
Liming White*

**INTERIOR** TIMBER CARE

# What you will need



## FEAST WATSON Liming White Floor Finish

- ✓ Soft Milky Finish
- ✓ Retains Timber Grain
- ✓ Extra Coats Build Colour Depth

COVERAGE: 8m<sup>2</sup> per Litre

RECOAT TIME: 2 Hours

NO OF COATS: 1 - 3 to desired colour

CLEAN UP: Water Wash up

PACK SIZE: 4L

MATERIALS

STEP 1

STEP 2

STEP 3

STEP 4


STEP 5

STEP 6

# Equipment you will need



*Orbital Sander*

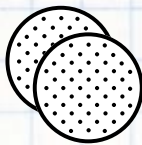

*Sandpaper*



*Paintbrush*



*Paint Roller*



*Roller Tray*



*Stirrer*

STEP 7

STEP 8

JOB DONE!

## STEP 1

# Snap it

### MATERIALS



STEP 1

STEP 2

STEP 3

STEP 4

STEP 5

STEP 6

STEP 7

STEP 8

JOB DONE!



### TAKE YOUR BEFORE PICS!

You will want something to compare your amazing work to after you are done. Take the opportunity to snap some quick pics.

## STEP 2

# Prep it



Cover all your furniture with plastic drop cloths.  
The dust from sanding can get into everything.

MATERIALS



STEP 1



STEP 2

STEP 3

STEP 4

STEP 5

STEP 6

STEP 7

STEP 8

JOB DONE!

### STEP 3

# Sand it

Sand that icky yellow varnish back. Using an orbital sander first use 80 grit and then on 120 grit to get a smooth finish. You will need to sand back to bare timber.

When you are done dust off and wipe off any dust with a wet cloth.



Sand it

#### MATERIALS

#### STEP 1

#### STEP 2

#### STEP 3

#### STEP 4

#### STEP 5

#### STEP 6

#### STEP 7

#### STEP 8

#### JOB DONE!

## STEP 4

# Stir it

Make sure you stir it really well. Use a stirring stick, scrape the bottom of the can. Keep mixing until there are no chunks on the bottom and it's all mixed in.



# stir it


MATERIALS



STEP 1



STEP 2

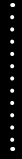

STEP 3



STEP 4

STEP 5

STEP 6

STEP 7

STEP 8

JOB DONE!

## STEP 5

# Coat it

The exciting bit! Pour the Liming White Floor Finish into a rolling tray. Cut in along the starting edge and the top and bottom of 2-3 boards at a time. Then use a roller with a microfiber nap and roll onto the wall 2-3 boards at a time.



### MATERIALS

STEP 1

STEP 2

STEP 3

STEP 4

STEP 5

STEP 6

STEP 7

STEP 8

JOB DONE!



### PRO TIP

Cutting in a little at a time will mean that you don't get lap marks. If you work too far ahead the Liming White can dry before you get to roll over. Be patient with this step, it makes the world of different.

To get the best finish, tip off with a dry brush.

## STEP 6

# Sand it



MATERIALS

STEP 1

STEP 2

STEP 3

STEP 4

STEP 5

STEP 6

STEP 7

STEP 8

JOB DONE!



## PRO TIP

If you lightly sand with 120 grit sand paper after your first coat you will smooth out the grain and the surface should end up flawless.



## STEP 7

# Two more coats

OR AS MANY AS YOU LIKE TO GET YOUR  
DESIRED INTENSITY OF COLOUR

REMEMBER - roll on - tip off  
And 2 hours between coats.



MATERIALS

STEP 1

STEP 2

STEP 3

STEP 4

STEP 5

STEP 6

STEP 7

STEP 8

JOB DONE!

...and you're done!

## STEP 7

# After Pics



Before

Dress your room and snap your after pics to share with the world. Remember to take them from the same spot for the best before and after reveal.

# After

MATERIALS

STEP 1

STEP 2

STEP 3

STEP 4

STEP 5

STEP 6

STEP 7

STEP 8

JOB DONE!

# Job done



## IT'S YOUR TURN!

Now you know How to Relove,  
give it a go!



MATERIALS

STEP 1

STEP 2

STEP 3

STEP 4

STEP 5

STEP 6

STEP 7

STEP 7

JOB DONE!

# Your turn